


LIDSAVER™ CLEANING INSTRUCTIONS

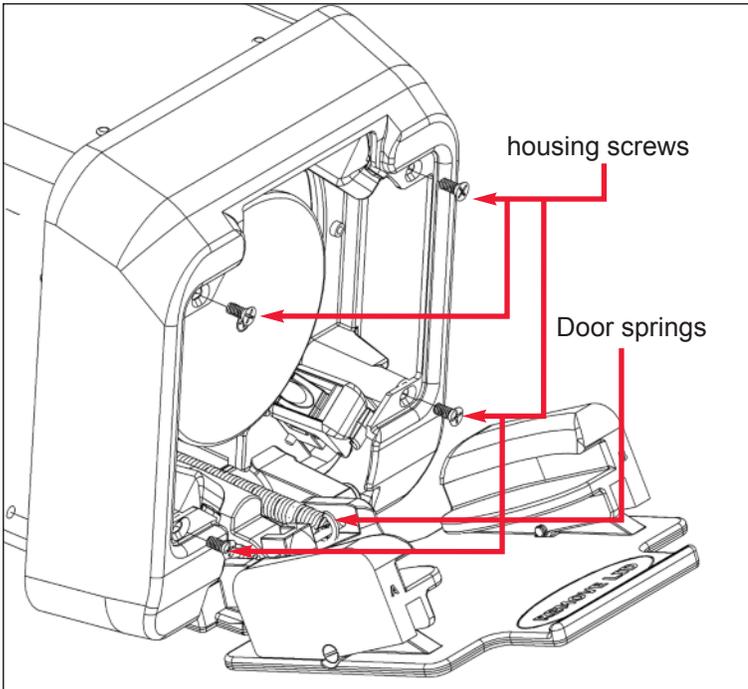

Over time “lid dust” or other debris may need to be removed from the LidSaver to keep its appearance as fresh and clean as possible. Follow these simple steps as needed.

Tools: Flat and Phillips screwdriver, cotton cloth, mild cleaning agent. Do not use power tools during these steps. Excessive tightening may cause damage.



1. Remove all lids from LidSaver™ dispenser
2. Remove the door springs using a screwdriver or needle nose pliers. The springs have a specially designed loop which makes it easier to remove or attach them. You do not have to completely remove the springs.
3. Remove the four screws holding the housing.
4. Remove the housing by working it around the door. Once you have removed the housing you can use a clean, damp cotton cloth and soapy water to remove the lid dust debris. To clean inside the LidSaver tube, simply push the “pusher plate” back inside the tube and clean as needed.

When you are finished removing the “lid dust/debris” use a separate clean, damp, cotton cloth to wipe the inside and outside of the housing to remove dust and streaks.

Optional Steps 5-7 While you have the housing remove we recommend these procedures.

5. Saturate each “Pager Assembly” with warm soapy water several times. Flex flipper portion of pager as your cleaning to insure flippers operate freely.
6. While pushing “Piston” to the back of the tube, wipe down bottom of tube to keep piston operating freely.
7. Spread a small amount of thick-bodied lubricant (Food Grade Silicone, Vaseline, etc.) to each of the two (2) door pivot points. Apply lubricant with the door fully open and also underneath with the door in a closed position. Apply a small amount of lubricant to each housing screw prior to installing.
8. Replace housing taking care to not overtighten screws.
9. Reload the LidSaver with lids.
10. Reattach the door springs.

Please refer to the maintenance manual that came with your LidSaver for other cleaning and maintenance tips. If you do not have a manual or would like a replacement please contact Acry Fab at the number below or download the manual at: <http://lidsaver.com/FAQs.html>

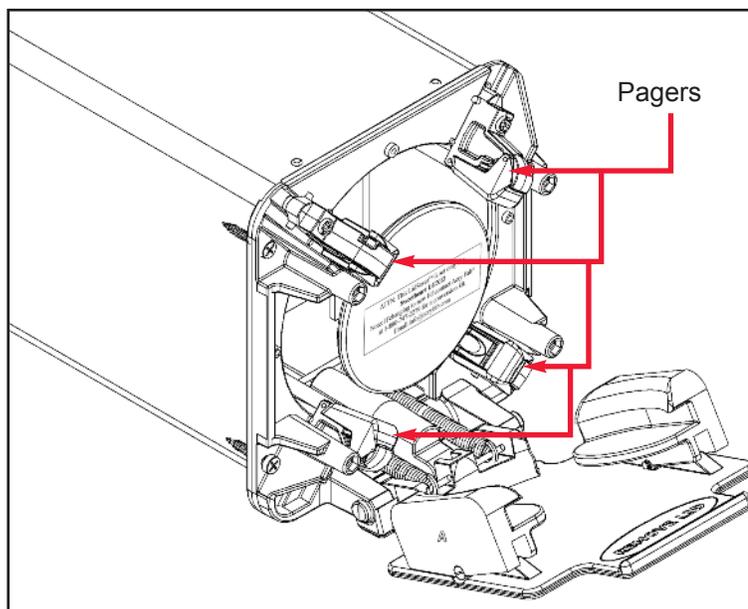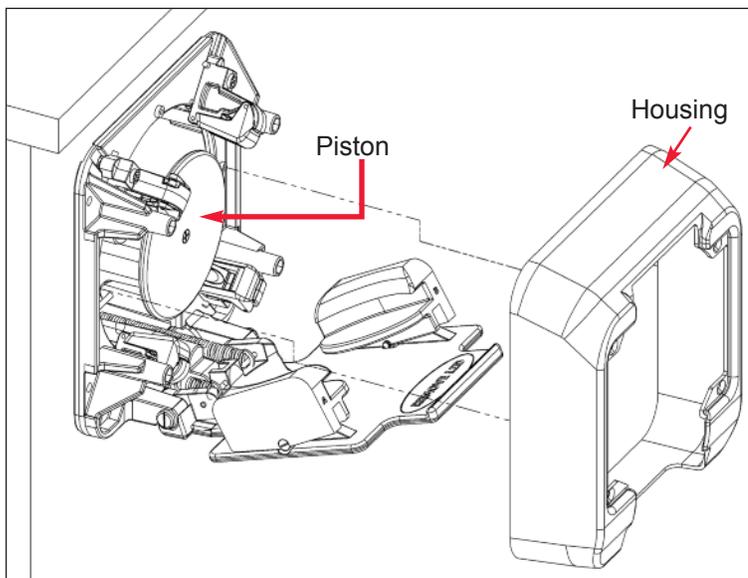

Outperform every day.™

The Vollrath Company, L.L.C.
1236 North 18th Street
Sheboygan, WI 53081-3201
U.S.A.

Main Tel: 920.457.4851
Fax: 800.752.5620
Technical Services:
800.628.0832
Service Fax: 920.459.5462